
Valve Symbols - Page 1

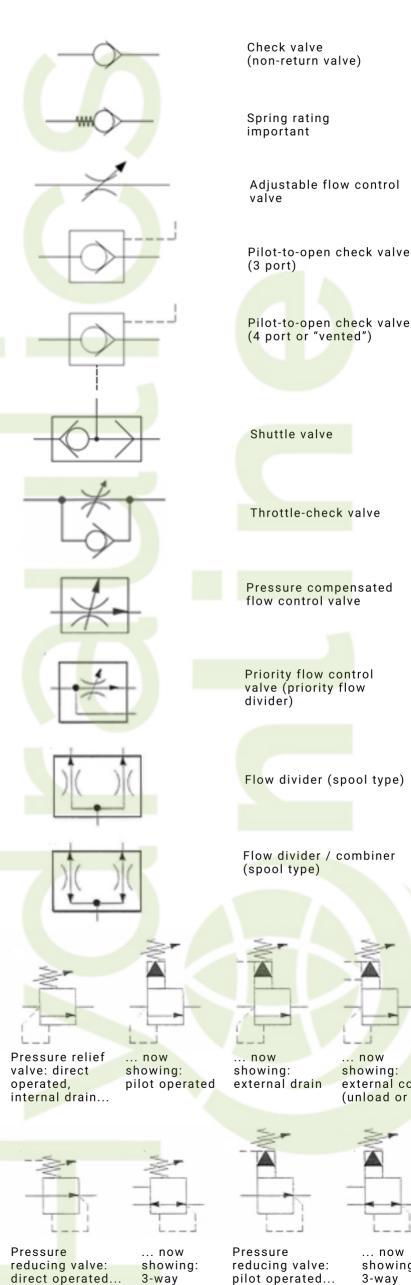

function

. now showing: external control (unload or "vent")

