
## **Lines & Basic Symbols**

Working hydraulic line Pilot line Drain line **Direction of flow** Hose or other flexible working line **Lines crossing** (no connection) Lines connecting Fixed throttle, lines with fixed restriction Adjustable flow control valve (Throttle Valve) Temperature compensated flow control valve Vented reservoir

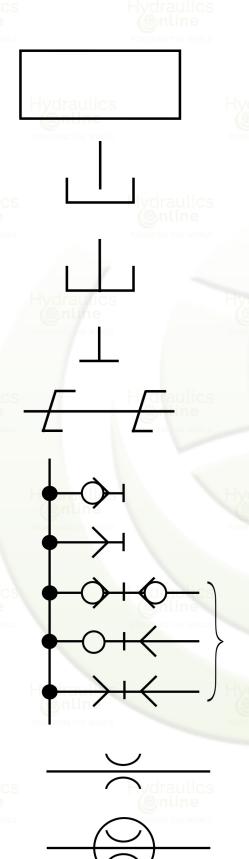

Pressurised reservoir

Connection to tank - above fluid level

Connection to tank - below fluid level

Plugged port

Connection to tank - below fluid level

Quick release coupling (closes when decoupled)

Quick release coupling (still open when decoupled)

**Mated pairs of Couplings** 

Orifice

Replaceable orifice

Plug in place of replaceable orifice